


Eco-Steamer

SSC-0312

CONTENTS

Important Safeguards.....	1
Description of Eco-Steamer.....	2
Main Features of Eco-Steamer.....	2
Instructions for Use.....	3
How to Assemble and Use.....	3
Accessories.....	3
Refill Water during use.....	4
Cleaning and Maintenance.....	4
Troubleshooting Guide.....	5
Warranty.....	6-7

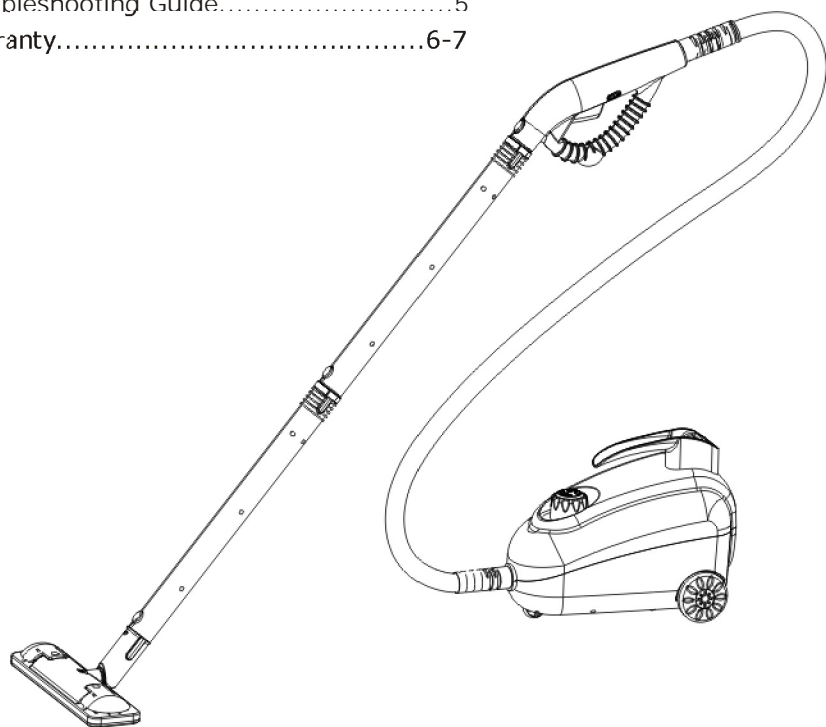

sienna™

IMPORTANT SAFEGUARDS

When using an electric appliance, basic precautions should always be followed:

READ ALL INSTRUCTIONS BEFORE USING THIS ECO-STEAMER

WARNING DANGER OF SCALDING


To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors.
- Do not leave the Eco-Steamer unattended while switched on. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used near children, pets or plants.
- The Eco-Steamer is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the Eco-Steamer into water or other liquids.
- Never direct steam towards people, animals or plants, or equipment containing components.
- Always unplug the power cord from the electrical socket when filling the Eco-Steamer.
- Do not use with damaged cord or plug. If the Eco-Steamer is not working as it should, has been dropped, damaged, left outdoors, or immersed into water, return it to the distributor before continuing use. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- Do not pull or carry by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not handle plug or the Eco-Steamer with wet hands or operate without shoes.
- Do not touch the hot surfaces during use. Allow the accessories to cool down before changing them.
- Keep your work area well lighted.
- Never put desiccating, aromatic, alcoholic or detergent products into the Eco-Steamer as this may damage it or make it unsafe for use.
- Follow these steps before unscrewing the Filler Cap:
 - 1) Turn off the Eco-Steamer.
 - 2) Unplug the power supply.
 - 3) Slowly start to unscrew the Filler Cap, wait a few seconds, then screw it off completely.
 - 4) Do not open water tank while in use.
- Use only as described in this manual. Use only manufacturer's recommended accessories and service agent.

SAVE THESE INSTRUCTIONS

DESCRIPTION OF ECO-STEAMER

1. Handle
2. Safety Filler Cap
3. Lighted on/off Switch
4. Steamer Body
5. Hose
6. Gun
7. Steam Trigger
8. Safety Slider
9. Extension Tubes
10. Connector
11. Floor Brush
12. Floor Cloth Pad
13. Extension Spout
14. Fabric Brush
15. Glass Squeegee
16. Round Brush
17. Funnel
18. Refill Cup(500ml)
19. Fabric Brush Pad

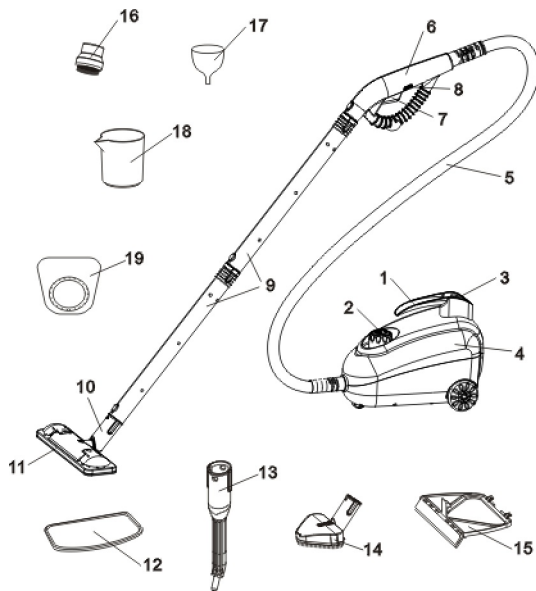

MAIN FEATURES OF THE ECO-STEAMER

Thank you and congratulations for choosing the Eco-Steamer.

The Eco-Steamer achieves a high degree of hygienic and degreasing power on floors. It turns water into pressurized hot steam in just a few minutes, so when contact is made with surfaces, dirt and grime is removed.

The Eco-Steamer uses the active power of steam without the use of detergents or chemicals, it is safe for the environment.

Since the Eco-Steamer achieves high temperature and pressurized steam, it completely removes dust mites and bacteria.

The Eco-Steamer is a new way of cleaning that is effective and far more hygienic.

The Eco-Steamer is a multi purposes cleaner with numerous accessories for thoroughly sanitizing all types of surfaces.

The Eco-Steamer is designed to provide continuous hot steam for more than 40 minutes per refill. To have this continuous steam without getting tired on your fingers, simply depress the steam trigger and push the safety slider to lock position.

INSTRUCTIONS FOR USE

The Eco-Steamer is designed to thoroughly clean floor surfaces, bath room, toilet, kitchen, windows, sofa...etc.

Warning: On surfaces that have been treated with wax, the wax may be removed by the heat and steam action. Do not direct steam onto a cold window.

HOW TO ASSEMBLE AND USE

Filling the boiler tank before use.

Warning: Before unscrewing the Filler Cap, always ensure that the Eco-Steamer is off and disconnected from the power supply.

Unscrew Safety Filler Cap and using Funnel, pour into the tank two measures cup of water. Screw Safety Filler Cap back on again.

Turning on the Eco-Steamer.

Warning: Before connecting the appliance to the power supply, ensure that the voltage shown on the rating label matches the local supply voltage. Always connect the Eco-Steamer to an earthed socket.

To turn on the Eco-Steamer, insert the power cord plug into an earthed socket and press ON/OFF switch. Switch is lighted when it is turned on.

Warning: To prevent steam from being accidentally released, shift Safety Slider to lock position.

Wait for about 4 minutes and press the Steam Trigger to supply steam.

When first using the Eco-Steamer and every time it is left unused for a while, always lift the Gun upward until the Hose is extended to its full height to prevent condensation of water inside the Hose, and point the Gun to a sink and discharge by pressing the Steam Trigger any water that has been formed in the Hose. As soon as the Eco-Steamer starts supplying steam, it is ready for use.

Accessories:

1.Extension spout:

It can be attached to the Gun or Extension Tube when extra length is required.

2.Round brush:

Two pieces of round brush are provided, it is to attach to the extension spout.

3.Floor brush:

It is used with extension tubes and provided with Floor Cloth Pad.

4.Fabric Brush and Glass Squeegee:

Fabric Brush can be attached to the Gun. Attach the Fabric Brush Pad to the brush when needed. The Glass Squeegee can be fitted to the Fabric Brush by inserting squeegee side hooks into brush tabs and pressing two parts together.

Refill water during use

Only refill after the water tank is totally empty and there is no more steam remaining.

Steam will be no longer supplied when the water runs out. To refill the water, follow these steps:

1. Turn off the Eco-Steamer by pressing ON/OFF Switch.
2. Unplug the Eco-Steamer.
3. Release the remaining steam by pressing the Steam Trigger.
4. Slowly unscrew Safety Filler Cap, wait for a few seconds until the steam stops hissing and then unscrew the cap completely.
5. Wait for a few minutes for the Eco-Steamer to cool down.
6. Refill the water tank with Funnel and Refill Cup.
7. Pour the water into funnel slowly at the beginning to avoid puffs of steam.
8. Screw on the Safety Filler cap completely.
9. Insert the plug into the electrical socket.
10. Press ON/OFF lighted switch.

Warning: The Safety Filler Cap may be very hot. Don't fill more than two measures cup of water into the tank.

Cleaning and maintenance

Warning: Always unplug the appliance before performing any cleaning or servicing operation. Unplug the appliance after use. Allow the appliance completely cool down before storing or cleaning.

In order to guarantee perfect functioning over a long period of time, the boiler needs to be rinsed out with water once a month to eliminate any possible accumulated calcium deposits. Do not use vinegar or other decalcifying substances. Fill into two measures of water, replace the cap and shake to loosen deposits. Remove cap and immediately empty water into a sink.

Warning: Do not immerse the unit in water.

TROUBLESHOOTING GUIDE

Below is a chart detailing the most common problems, their causes and solutions. Prior to troubleshooting, isolate the unit by removing the cord from the power socket.

PROBLEM	CAUSE	SOLUTION
No steam.	Eco-Steamer is not on. Water tank is empty.	Switch on the Eco-Steamer by pressing the Switch Button and make sure the red light is on. Refill the water tank as instructed.
No steam, but water.	Condensation is formed inside the hose.	Press the Steam Trigger and release the water until steam comes.
Puffs of steam during refill.	Water tank is too hot.	Leave the Eco-Steamer to cool down for a while before refill, use the provided Funnel for refill every time.

ONE YEAR LIMITED WARRANTY

Warranty: This product warranty extends only to the original consumer purchaser of the product. This product is warranted by the manufacturer to be free from all defects in materials or workmanship for a period of one year from the date of original purchase. This warranty is subject to the following conditions, exclusions and exceptions.

Warranty Exclusions: This warranty does not cover normal wear and tear of parts and does not apply to any product that has been tampered with or used for commercial purposes. This warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to mishandling in transit or shipping. This warranty does not cover damage or defects caused by or resulting from repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by the manufacturer. This warranty is effective only if the product is purchased and operated in the USA or Canada, and does not extend to any units which have been used in violation of written instructions furnished by the manufacturer, or to units which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Performance: During the limited warranty period, the manufacturer will, at its option, repair or replace free of charge a defective product or part that is covered by this warranty. As a matter of warranty policy, the manufacturer will not refund the purchase price. A repaired or replacement product will be covered by this warranty for the balance of the initial one year warranty period and an additional one month period. To contact Consumer Service write to:

Anvid Products, Inc.
Attn: Consumer Service
1401-1499 Greenville Road,
Livermore, CA 94550

Or call : 1-888-5SIENNA (1-888-574-3662).

Please refer to your product name and model number when contacting Consumer Service.

Consumer Service will give you further instructions for returning a defective product for repair or replacement. When returning a defective product, carefully pack the item to avoid damage in shipping. The manufacturer cannot assume responsibility for loss or damage during incoming shipment. We recommend that you insure the package, as damage in shipping including the shipping cost is not covered by this warranty. Be sure to include the following items with your product: any accessories related to the problem; your name, complete address and phone number; a note describing the problem you experienced; and a copy of your sales slip or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Out-of-Warranty Service: A flat rate charge by model is made for Out-of-Warranty service. Please contact our Customer Service for a flat rate. In addition, please include a check of \$20.00 made payable to “ Anvid Products, Inc. ” for return shipping and handling. The check will need to be cleared by the Bank to enable us to return the product.

Limitation of Remedies: No representative or person is authorized to assume for the manufacturer any other liability in connection with the sale of our products. This limited warranty is not transferable and any sale, transfer or other disposition of the product voids this limited warranty. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

REPAIR OR REPLACEMENT SHALL BE THE SOLE REMEDY OF THE PURCHASER UNDER THIS LIMITED WARRANTY, AND IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSSES OR EXPENSES YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF THE PRODUCT OR FOR ANY BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.